


VAC-U-PULL-XL SAFETY PRECAUTIONS

Eye protection must be worn when operating the pulling tower

1. Check the condition of the gasket (ensure there are no gaps or tears) and remove any large debris.
2. Ensure the floor is level and clear of debris (sweep or blow off any debris).
3. Check the condition of the pulling strap. Do not use it if the strap is damaged or torn.
4. The air line must remain connected to the tower during use. Do not close the air valve while pulling pressure is being applied.
5. Make sure that if you are using the bear claw, it is screwed tightly all the way up.
6. Once the air is turned on and it vacuums down, push from the back of the post to ensure it is well anchored.
7. Like with any pulling tower, stand to the side while pulling in case the attachment point on the vehicle were to release.
8. Keep hands clear of pinch points during use.

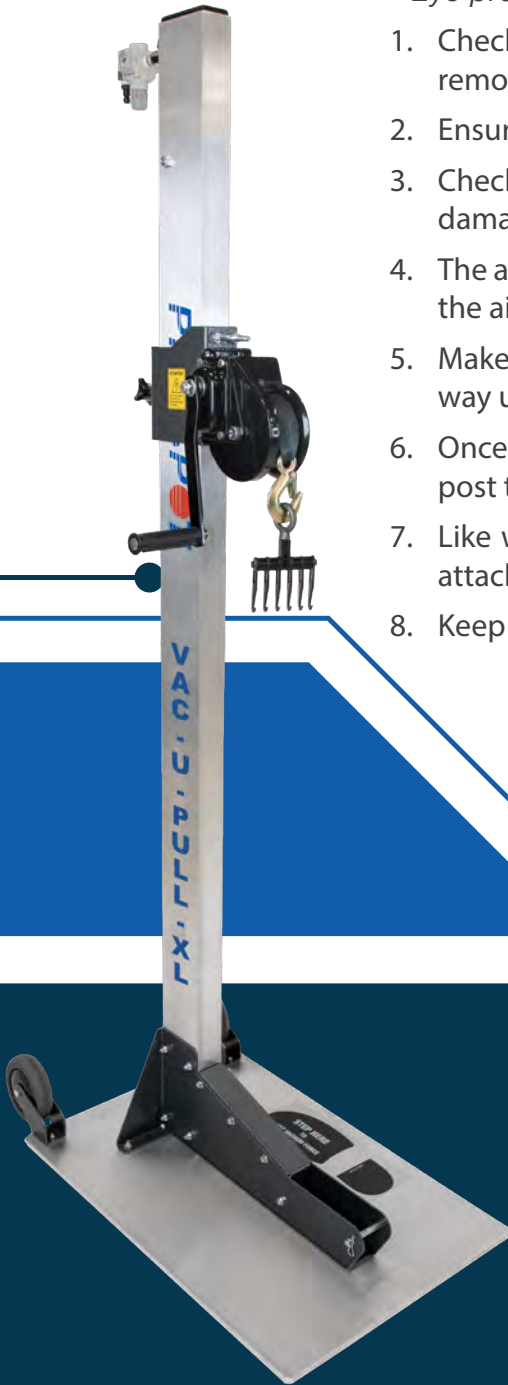




PRO SPOT
QUALITY WELDING SYSTEMS

VAC-U-PULL

MOBILE DENT PULLING TOWER

**CONTACT US OR YOUR LOCAL
PRO SPOT DISTRIBUTOR**

PROSPOT.com
info@prospot.com
+1-760-407-1414

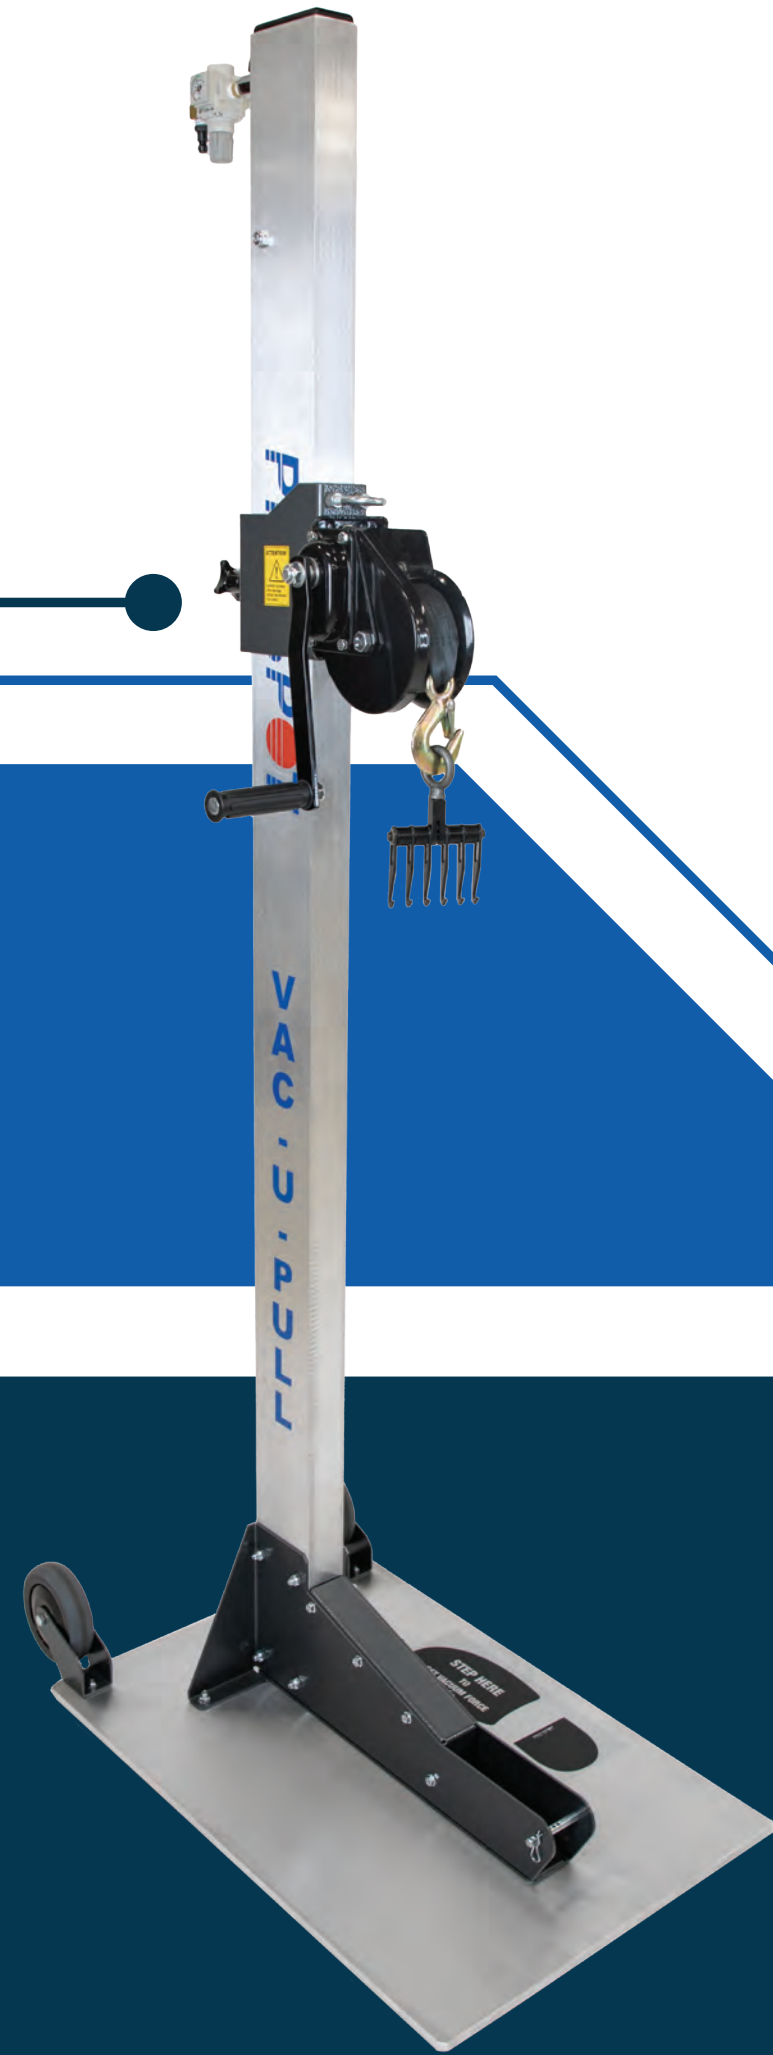

PRO SPOT
QUALITY WELDING SYSTEMS

VAC-U-PULL

MOBILE DENT PULLING TOWER

CONTACT PRO SPOT:

PROSPOT.com
info@prospot.com
+1-760-407-1414